


MYSTER SPYKE

Overview

In order to ensure safe use please read all instructions and safety warnings before operating. Failure to follow instructions may result in injury and may void your warranty.

Key Features

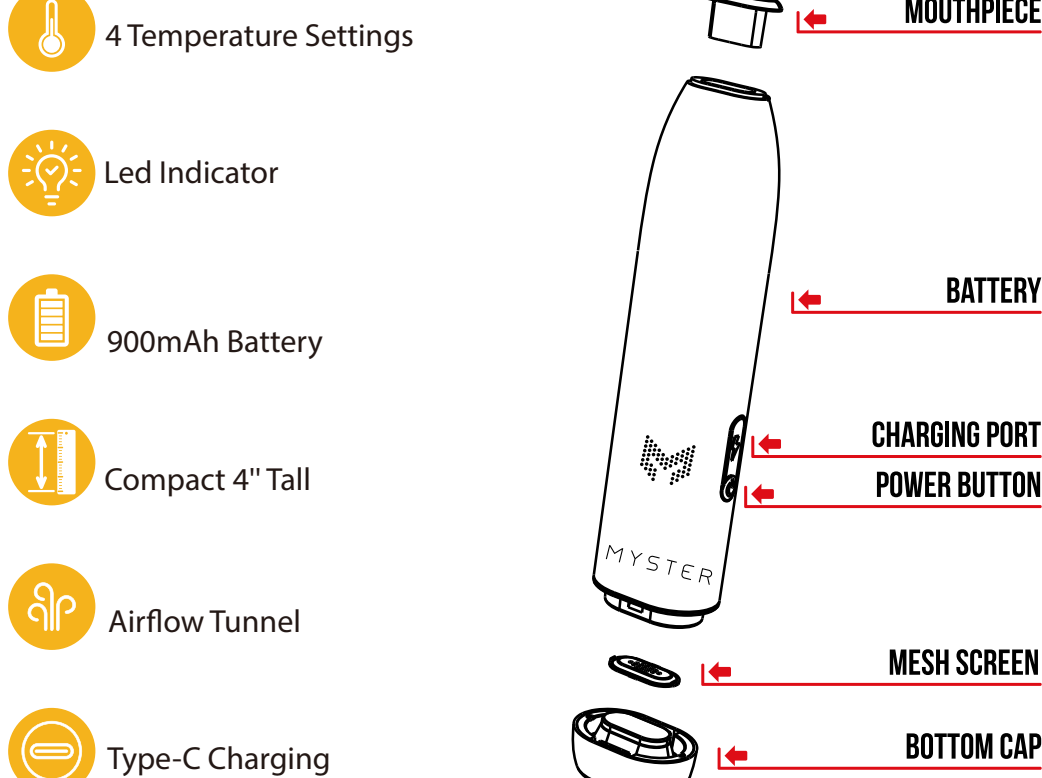

Charging SPYKE

Charging Time

1.5 Hours


Charging Indicators

While charging, the light indicator will show red. When the device is fully charged the light will show green. Smoking is not supported while charging.

Battery Indicator

Press button 1 time to display corresponding battery level:

Green light 2s: >75%	Blue light 2s: 30%-75%	Red light 2s: <30%
>75%	30%-75%	<30%

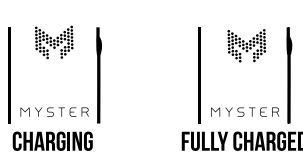

Troubleshooting

Low Power Warning

When the voltage is lower than 20% (3.2V), red lights flash 10 times to alarm and automatically shut down.

Short Circuit

Red light will flash 3x and then shut off.

Getting Started

Turning On/Turning Off	Press and hold the power button for 3secs to turn on. Press and hold the power button again for 3secs to turn off.	3SEC
Charging temperature	Press power button quickly 1x after turning in to change the temperature.	
Temperature Range	Led light indicators will display current temp. 360°F 390°F 410°F 440°F	


Preheat Mode

- Once the device is on, it will automatically start preheat mode after 5secs to the set temperature.
- The device will vibrate once to start preheat mode. When the set temperature is reached, the device will vibrate twice to begin your session.
- At 440°F the device will end it's heating cycle after 2 mins. All other temperatures will end it's heating cycle after 3 mins. The device will vibrate 2x and then turn off when the heating cycle is finished.

Getting Ready


Grind your herb

- Grind your herb and fill the disired amount into the chamber.
- For best results grind herb to the consistency of crushed pepper.

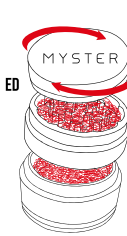

Filling the unit

Loosely fill the chamber then gently pack it down.

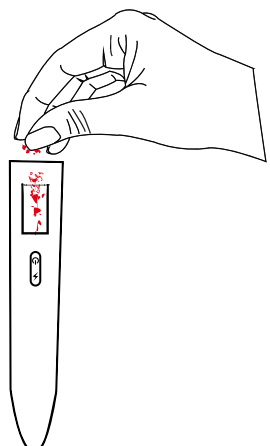


User tips

- For the best results fill Chamber halfway or more. Do not pack tightly. This allows for even heat distribution and room to stir.
- Whenever possible after use allow unit to cool. Stir herbs before the next cycle.


Using the SPYKE

Packing the SPYKE

If overpacked the SPYKE won't have good airflow.

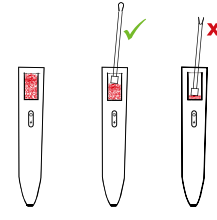

Unit is ready

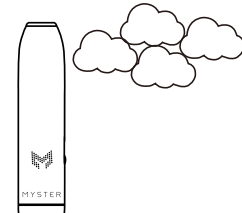

When herb is done


Stir your herb. If discolored it is no longer useable. If there is some color it is still useable.

How to clean

Cleaning the Chamber

User tips:

- Open the bottom Cap.
- Make sure the device is off and has completely cooled down before cleaning.
- Turn the device rightside up to ensure no alcohol drips into the battery.
- Use an alcohol soaked dab swab or wipe and gently wipe the chamber clean.

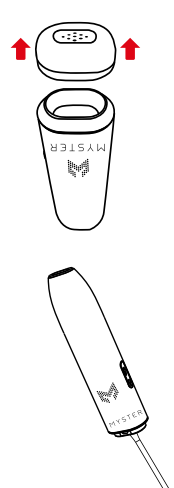


- Remove the material from the chamber.

Cleaning the Airway Channel


User tips:

- Open the bottom Cap.
- Take off the mouthpiece.
- Use the attached alcohol swabs of the smaller end to clean the straight airway path directly from mouthpiece side.

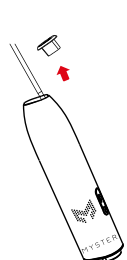


Cleaning the Mouthpiece

- Completely disassemble the mouthpiece to clean.
- Use an alcohol soaked dab swab or wipe and gently wipe the mouthpiece clean.

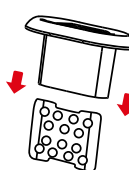

User tips:

Do not leave the mouthpiece soaking in alcohol as this may damage the materials.

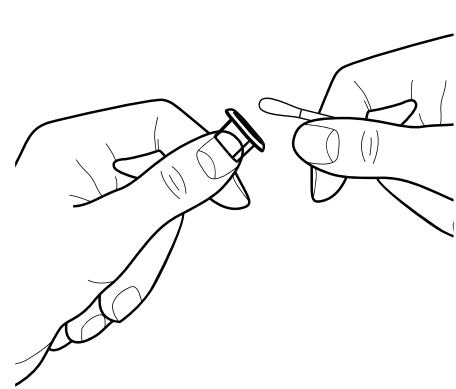


Includes




Mouthpiece




3D oven screen

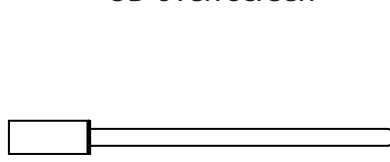

Multi-tool

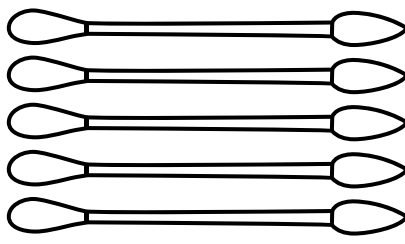

(5) Alcohol swabs

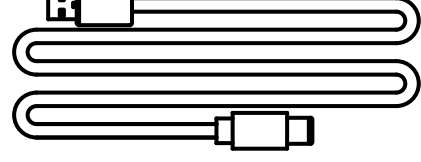

Type-C charging cable